

DR99-BSP8-BAIL MANUAL

SUSPENSION BAIL FOR BSP8 DRIVER


Step 1 - Make sure the torque lock sleeve (Included with each BSP Series Screwdriver) is firmly installed before attaching the suspension bail.



Step 2 - Slide suspension bail over the torque lock sleeve with the balancer clip orientated up.



Step 3 - Starting with Cap Screw #1 (See image to the right) Tighten with 3/8" wrench for the nut, 5/32" hex key for the Cap Screw until snug. Repeat for Cap Screw #2 and ensure that the bail is fastened securely to outside of the torque lock sleeve. *Make sure to periodically check suspension bail and re-tighten if necessary.*

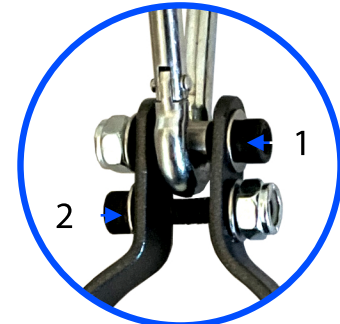

Step 4 - Attach balancer clip to balancer wire and tension the balancer to accommodate the weight of the tool.

